 
 
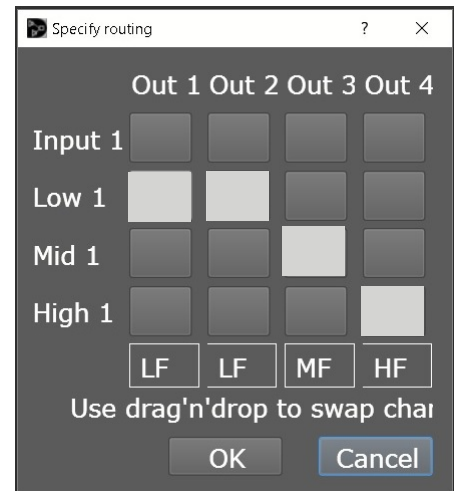 
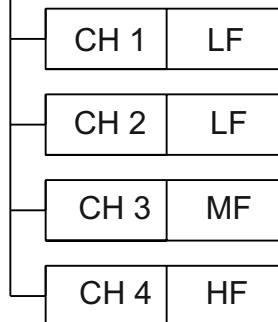 
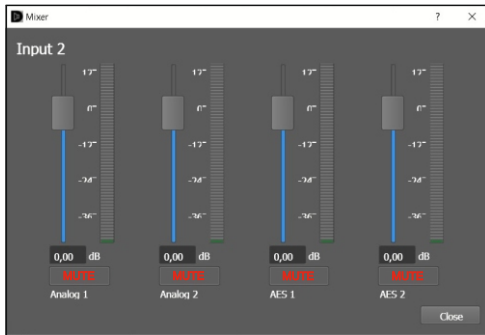 
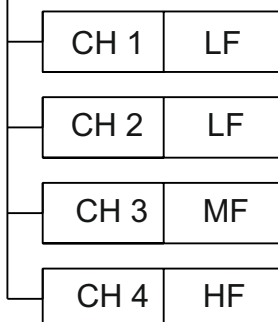 


ProTone A4xD (6 channel DSP) ProTone A44D (4 channel DSP)

 
 
preset T35-4x (6 channel DSP) T35-44 (4 channel DSP)

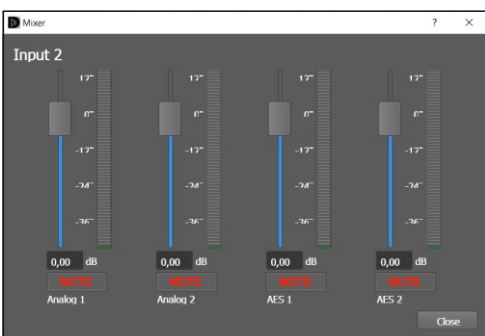

preset T32-4x (6 channel DSP) T32-44 (4 channel DSP)

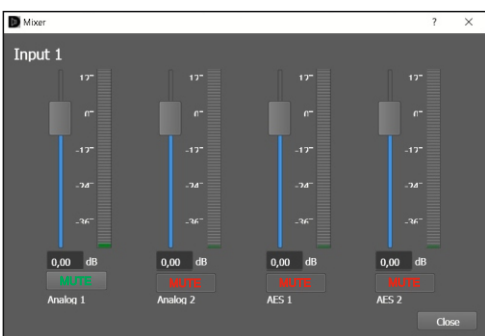

**preset T820-4x (6 chanel DSP)
T820-44 (4 chanel DSP)**

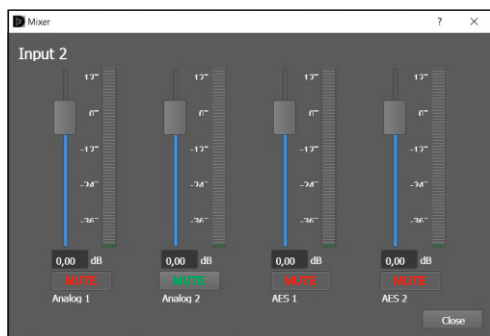
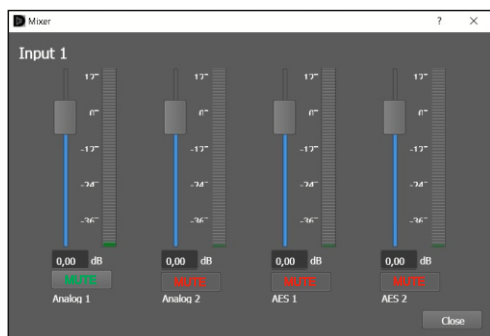


CH 1 LF



CH 2 HF

CH 3 LF

  CH 4 HF

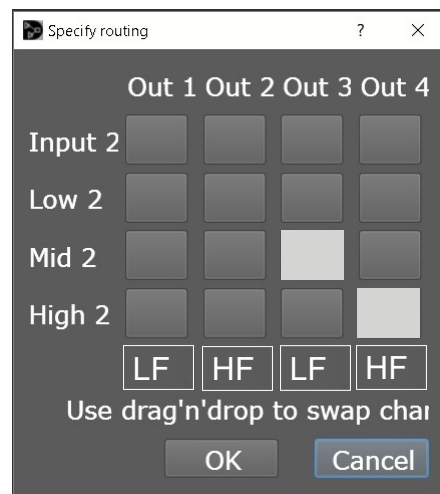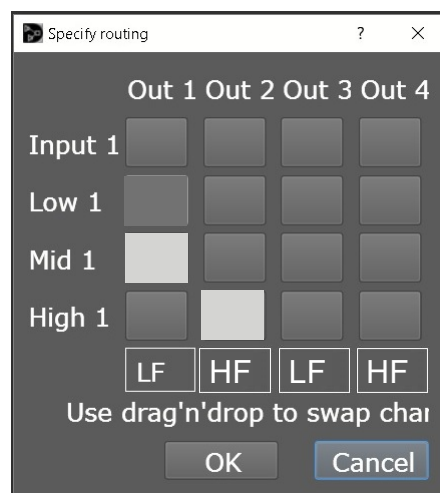

  **preset T820FF-4x (6 chanel DSP)
T820FF-44 (4 chanel DSP)**

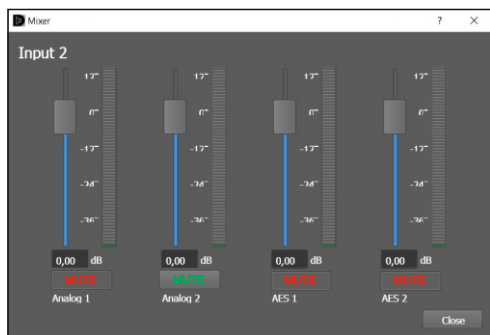
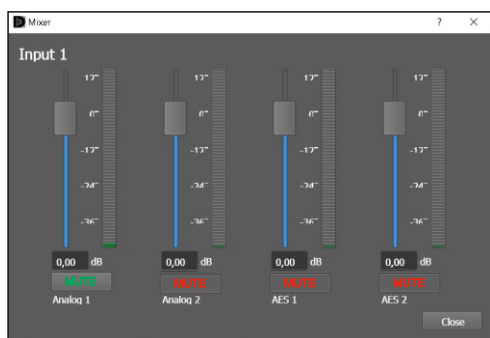


CH 1 LF

CH 2 HF



CH 3 LF

  CH 4 HF

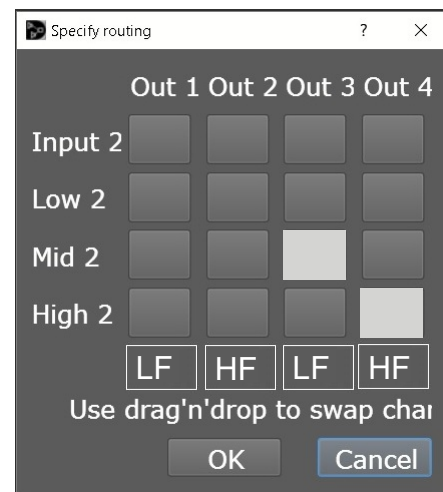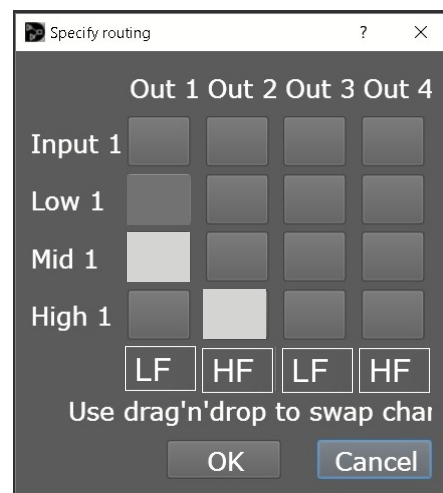

Input1

  preset P701-4x (6 channel DSP)
P701-44 (4 channel DSP)

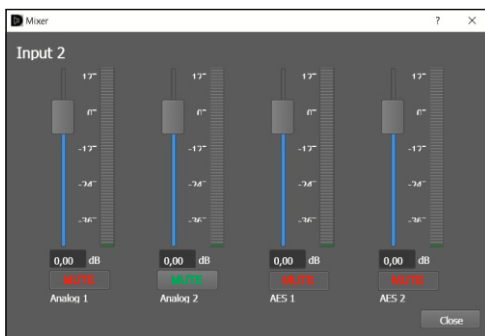
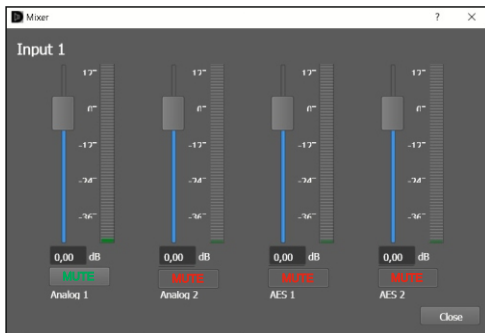


CH 1	SB
------	----

CH 2	LF
------	----



CH 3	MF
------	----

CH 4	HF
------	----

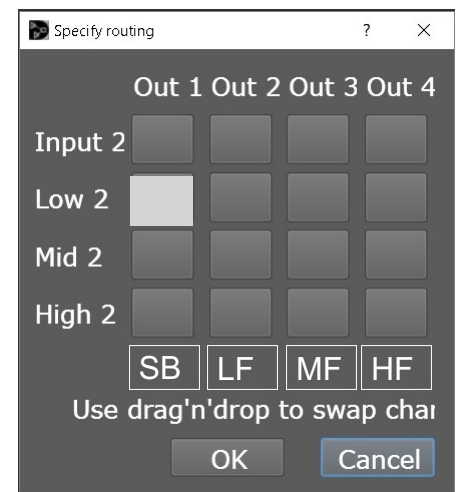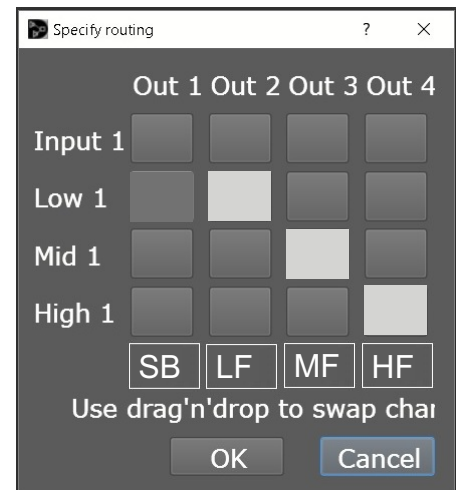  **Input 2**

preset P718S-4x (6 channel DSP)
P718S-44 (4 channel DSP)

  preset P718S-4x (6 channel DSP)
P718S-44 (4 channel DSP)

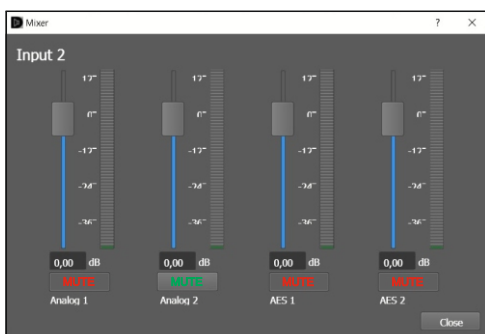
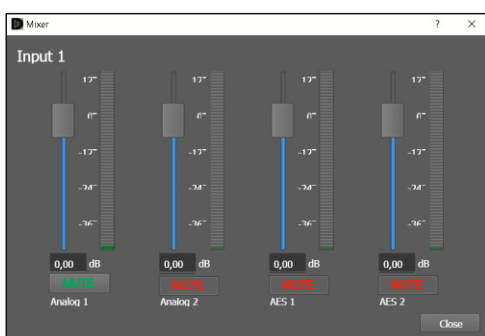


CH 1	SB
------	----






CH 2	SB
------	----

CH 3	SB
------	----






CH 4	SB
------	----

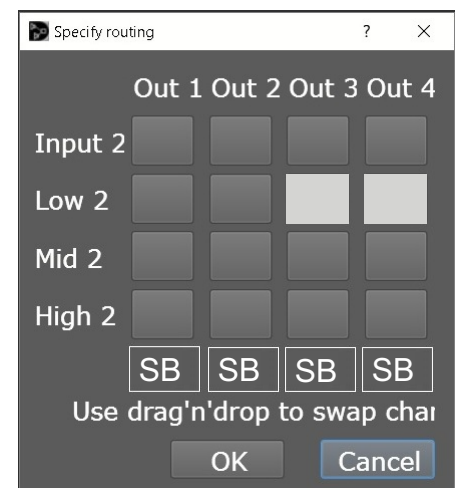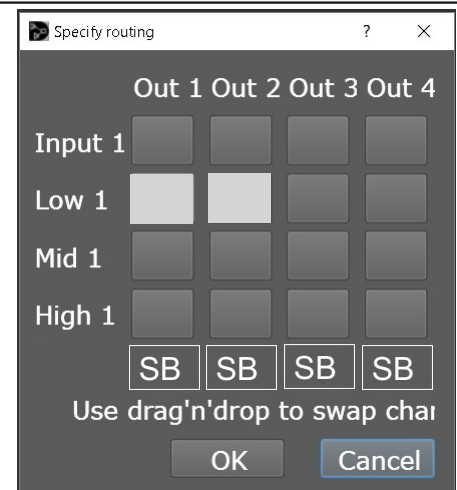  

 
 
 
 
 
**preset P718SK-4x (6 channel DSP)
P718SK-44 (4 channel DSP)**

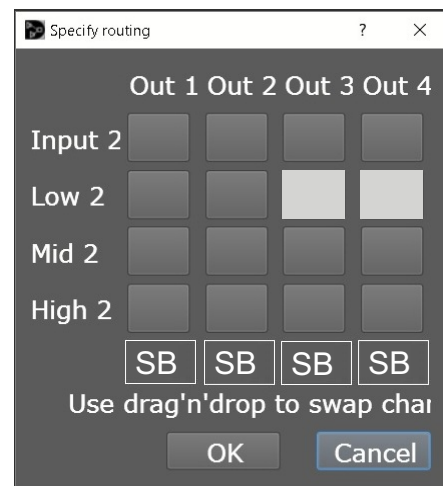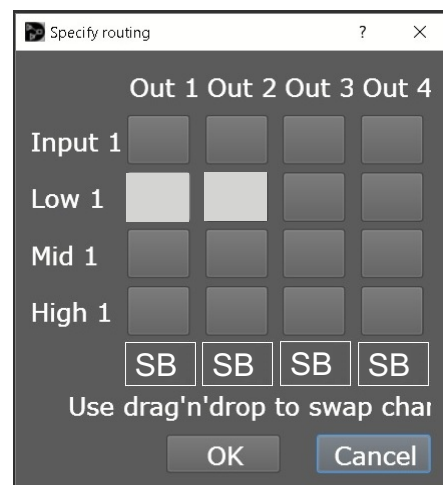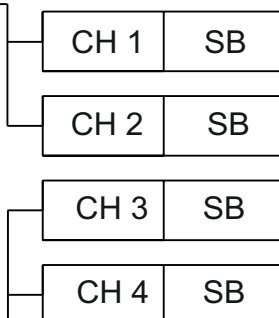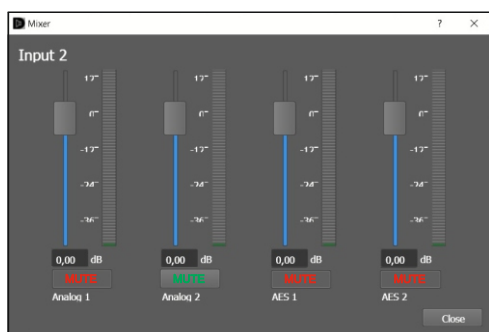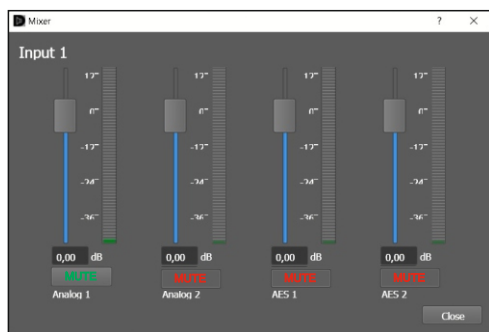

 
 
 
 
 
**preset T218S-4x (6 channel DSP)
T218S-44 (4 channel DSP)**

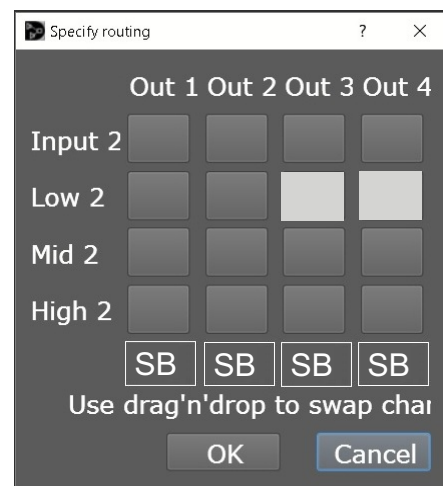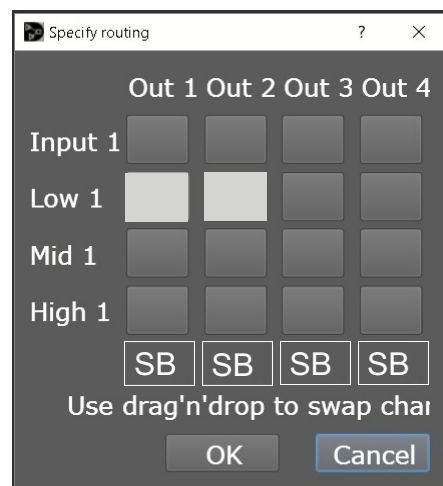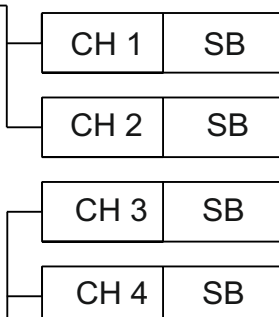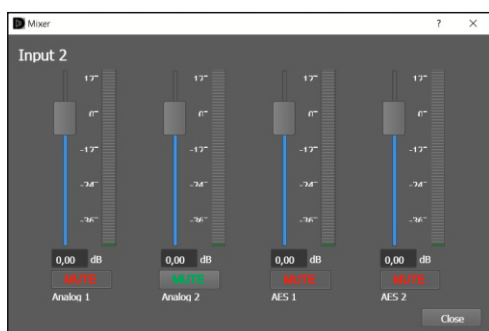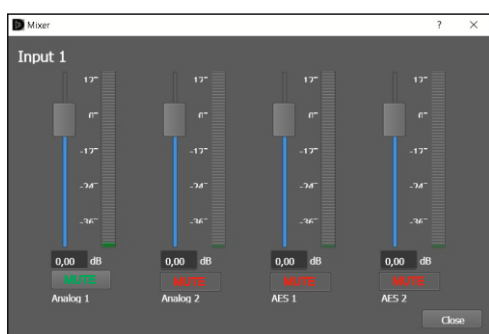

 
 
 
 
 
**preset M15-4x (6 chanel DSP)
M15-44 (4 chanel DSP)**

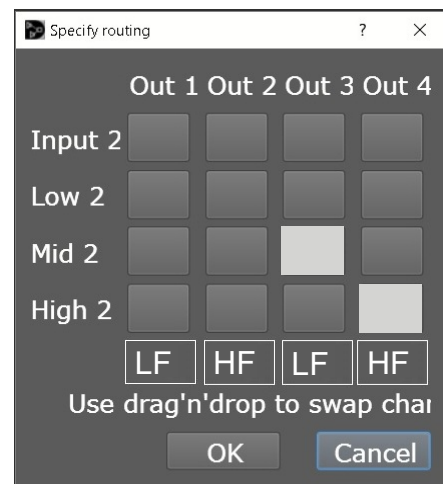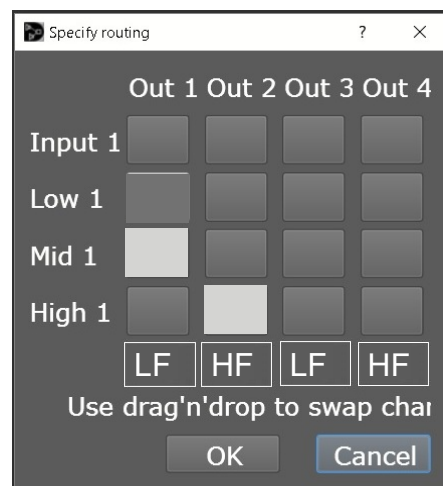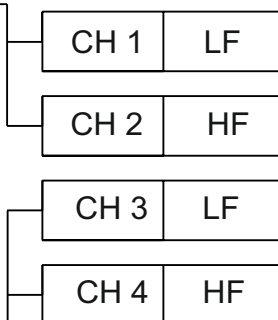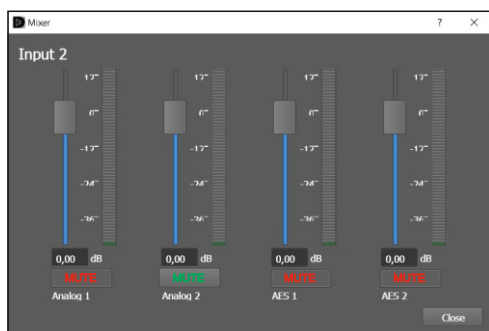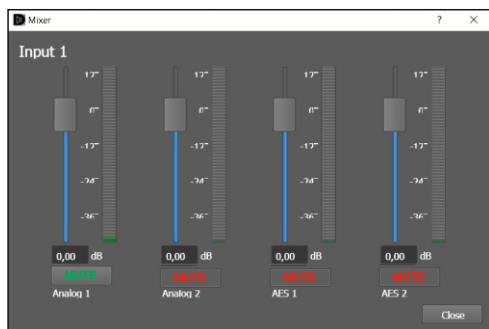

 
 
 
 
 
**preset M12-4x (6 chanel DSP)
M12-44 (4 chanel DSP)**

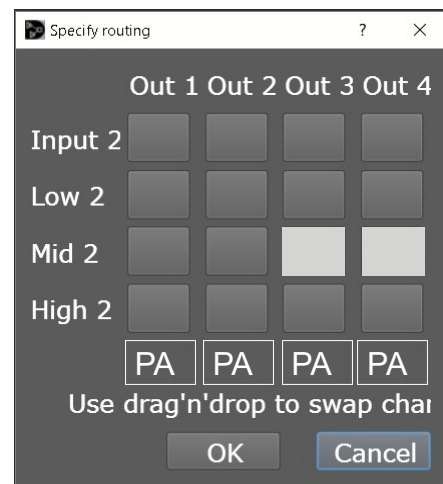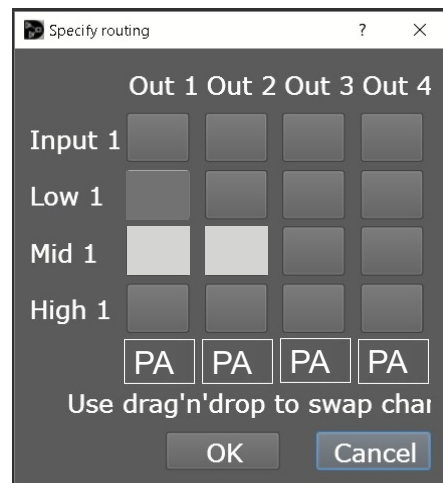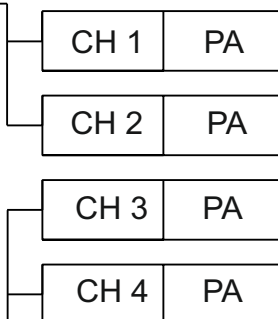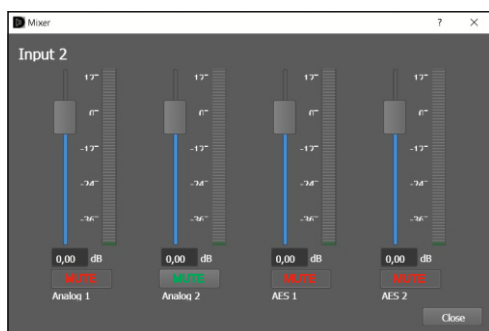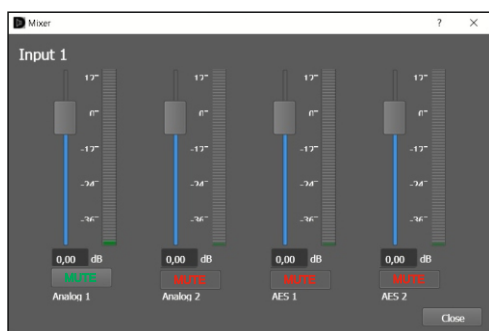

 
 
 
 
 
preset E50-4x (6 chanel DSP) E50-44 (4 chanel DSP)

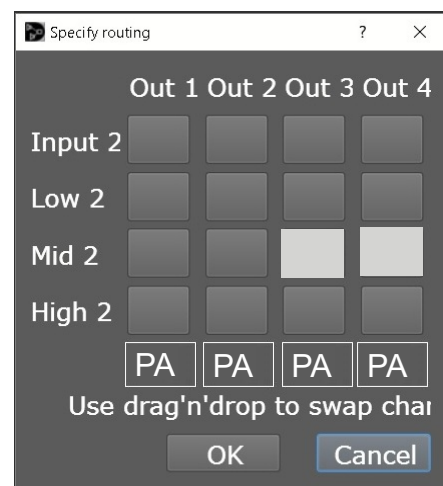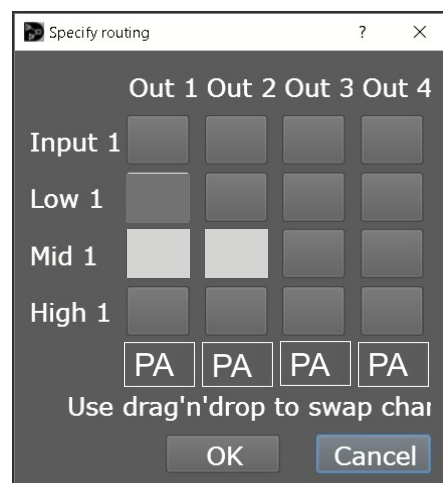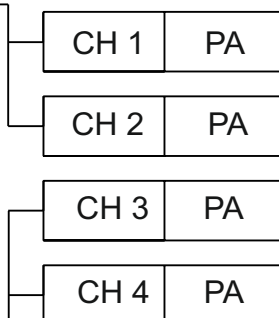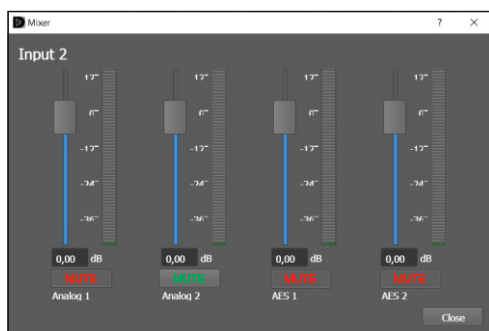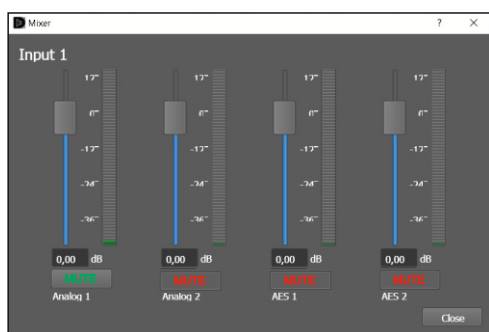

 
 
 
 
 
preset E50+E208-4x (6 chanel DSP) E50+E208-44 (4 chanel DSP)

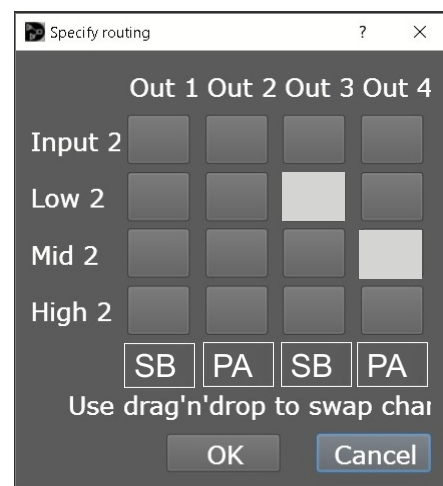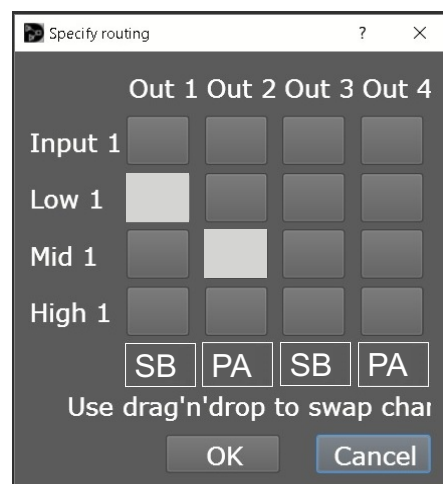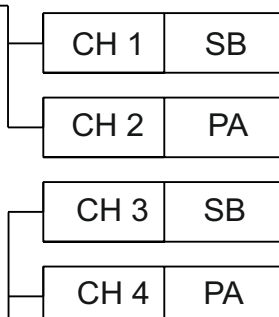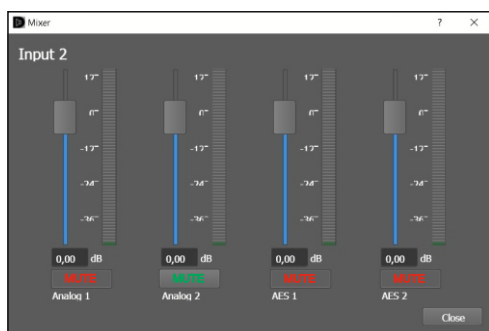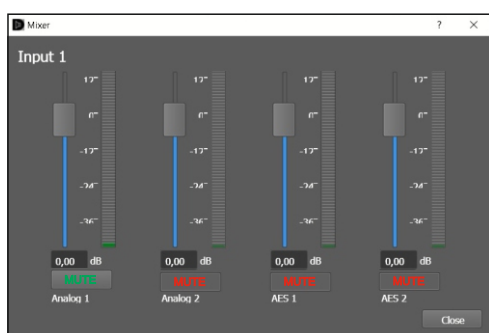

 
 
 
 
 
**preset E80-4x (6 chanel DSP)
E80-44 (4 chanel DSP)**

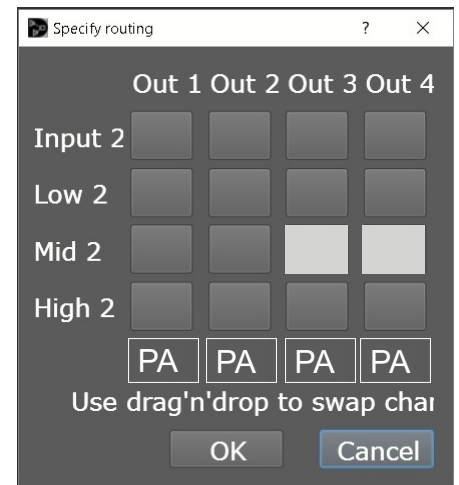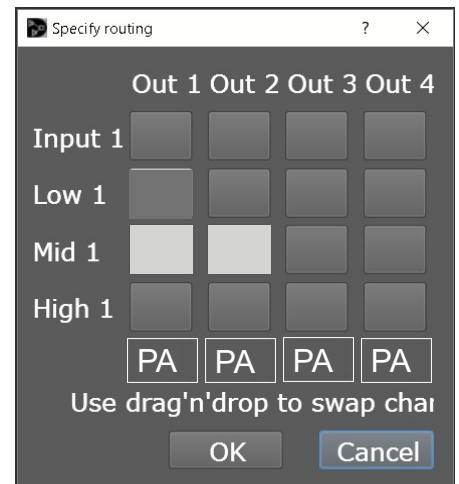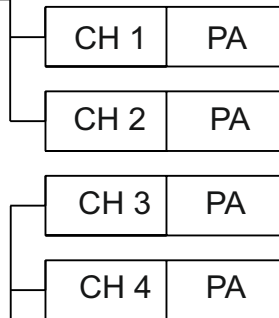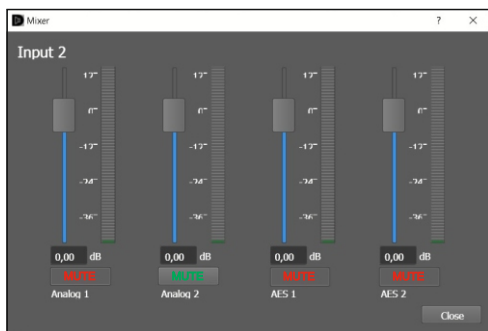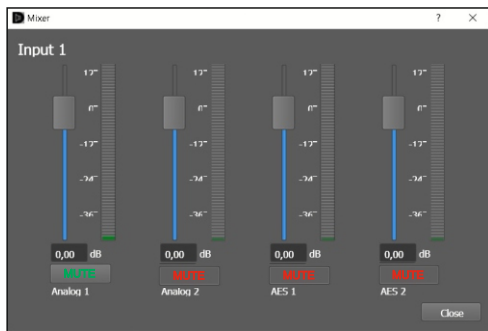

 
 
 
 
 
**preset E63+E212-4x (6 chanel DSP)
E63+E212-44 (4 chanel DSP)**

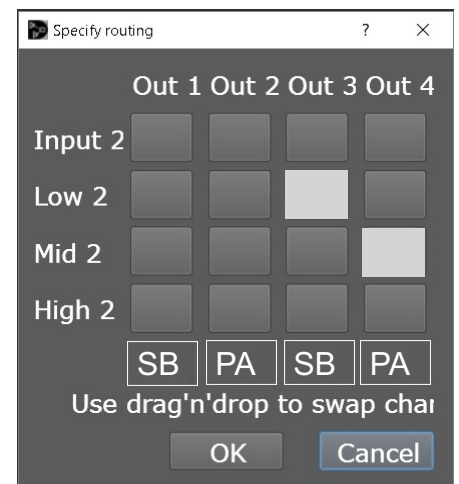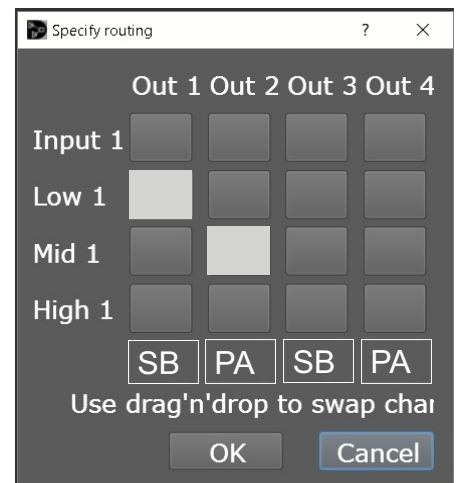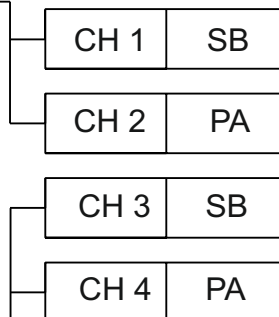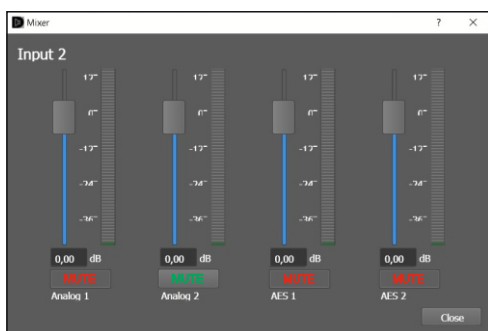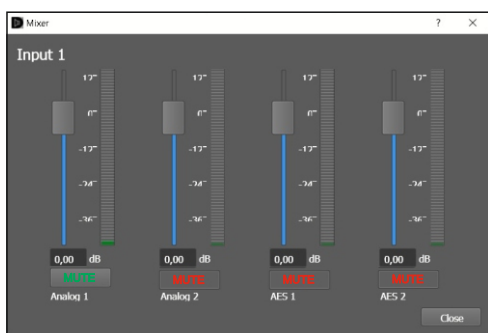

 
 
 
 
 
preset E84-4x (6 chanel DSP) E84-44 (4 chanel DSP)

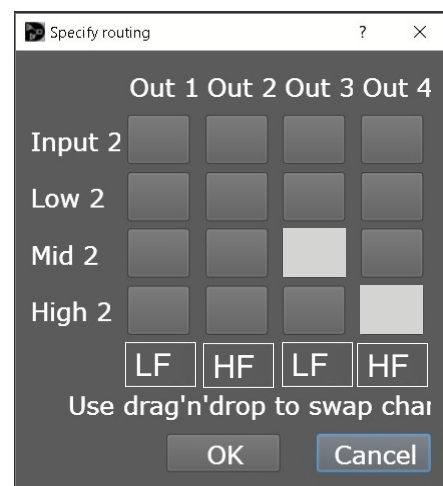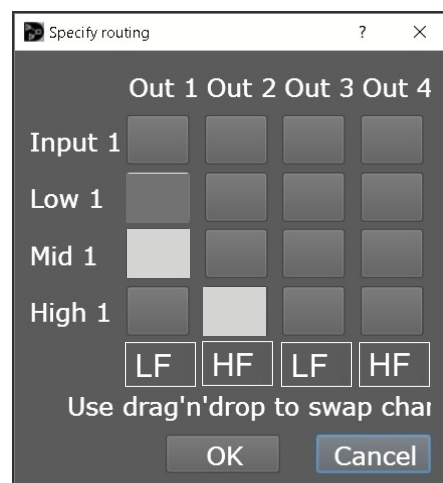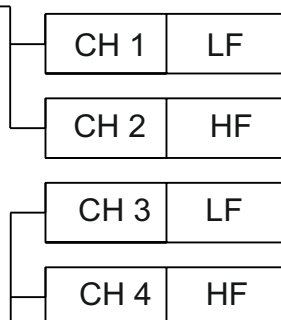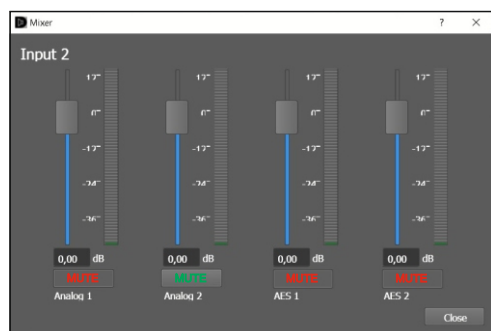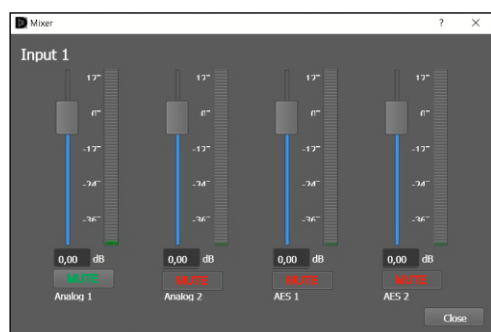

     preset E84+E215-4x (6 chanel DSP) E84+E215-44 (4 chanel DSP)

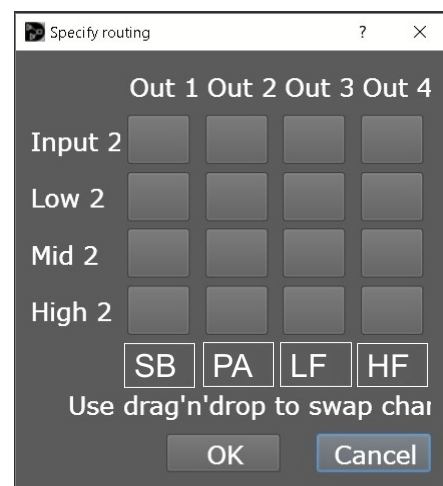
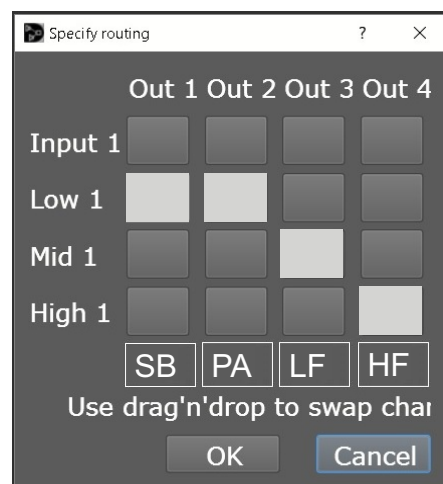
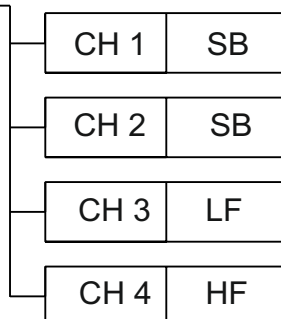
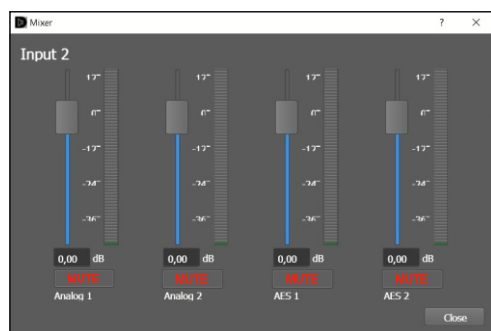
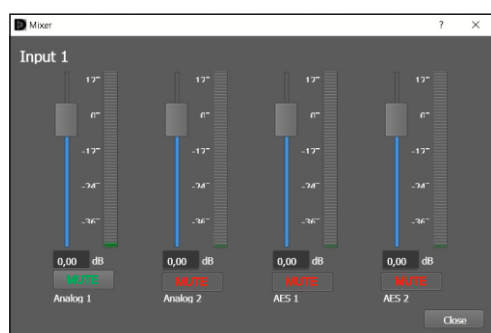


     preset E84+SB-4x (6 chanel DSP) E84+SB-44 (4 chanel DSP)

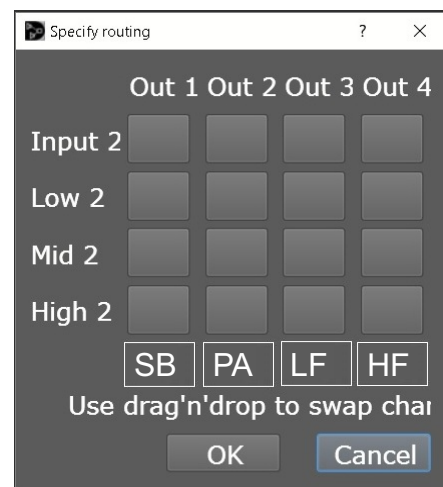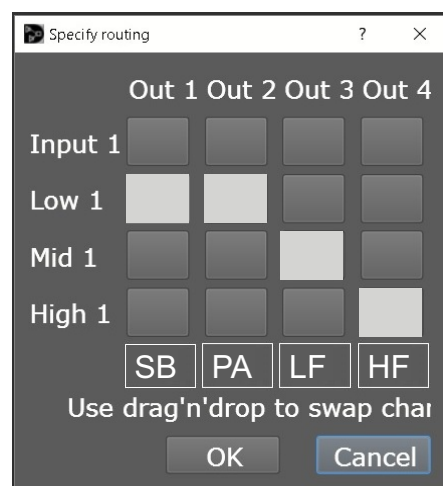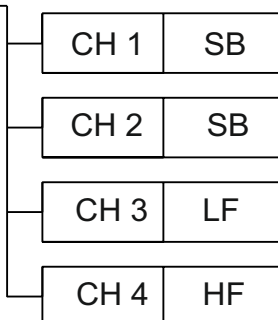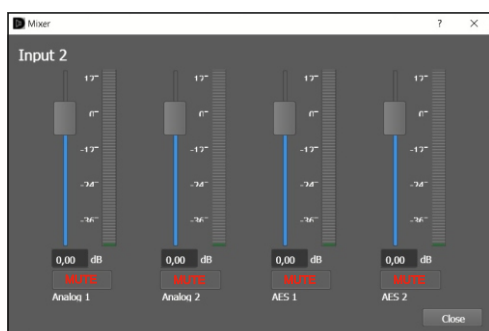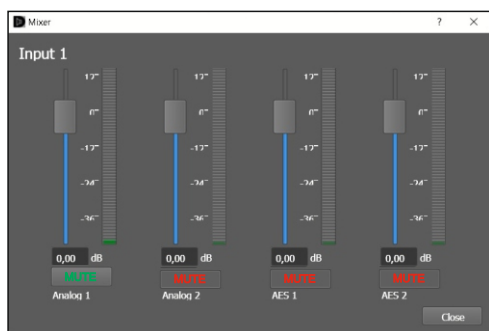






COMBO

     preset P718S-4x (6 chanel DSP) P718S-44 (4 chanel DSP)

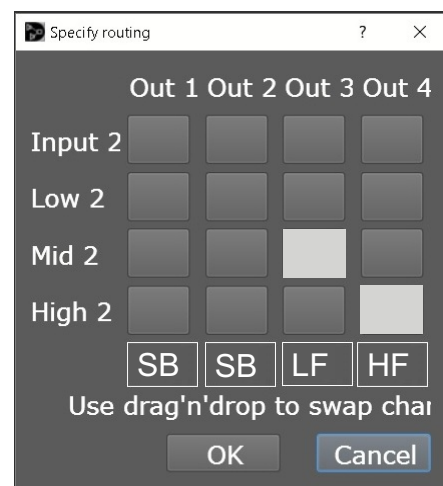
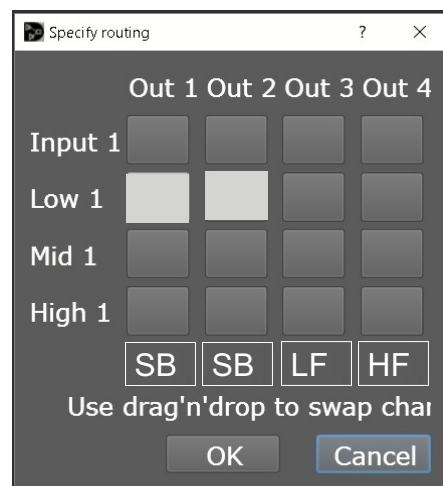
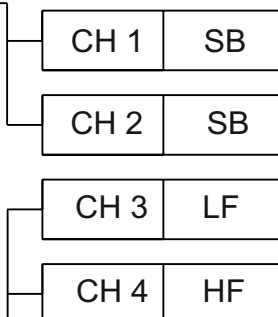
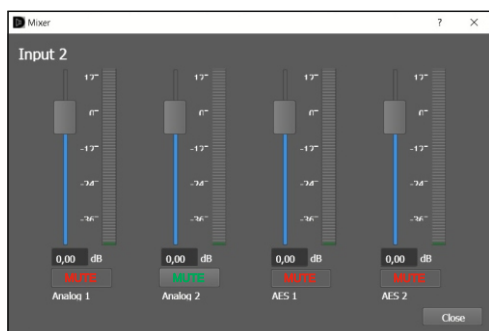
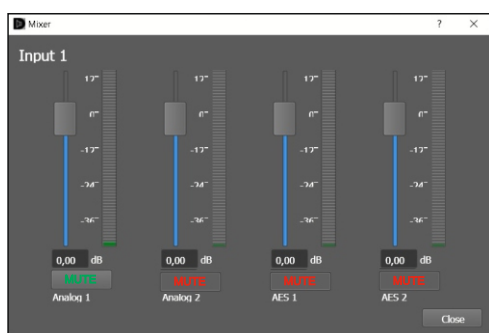


preset E84-4x (6 chanel DSP) E84-44 (4 chanel DSP)

     **preset 150UT-4x (6 chanel DSP)
150UT-44 (4 chanel DSP)**

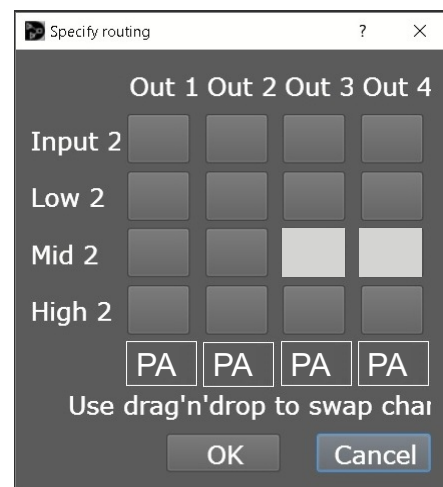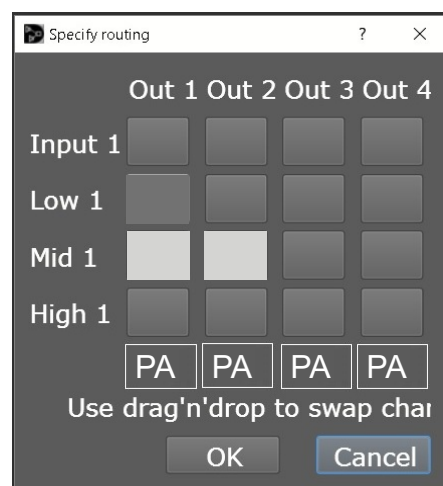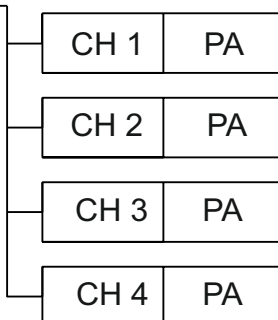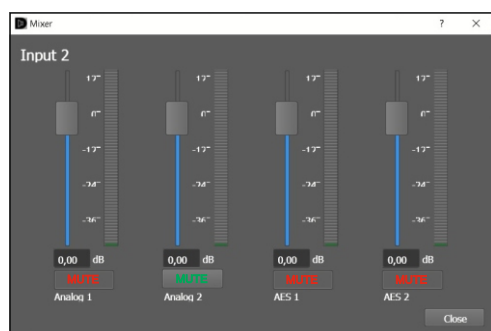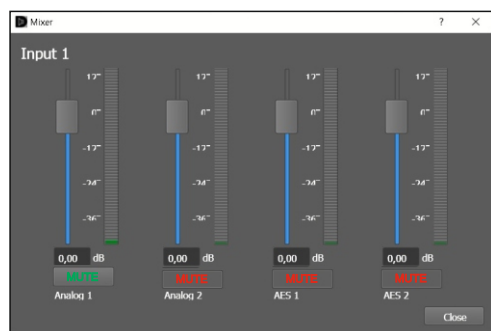

    
 
**preset 120UT-4x (6 chanel DSP)
120UT-44 (4 chanel DSP)**

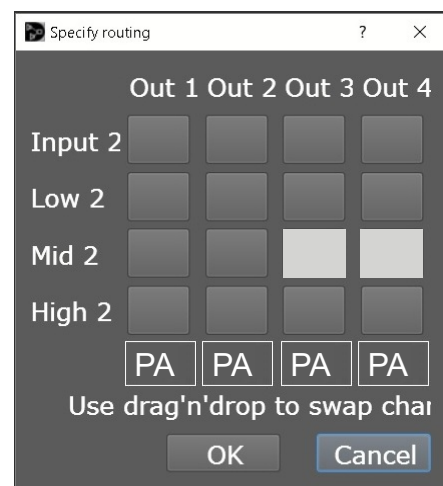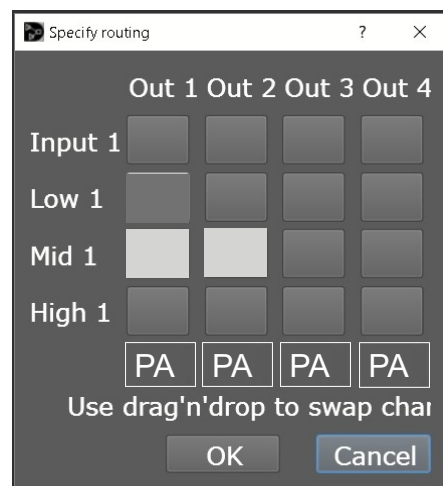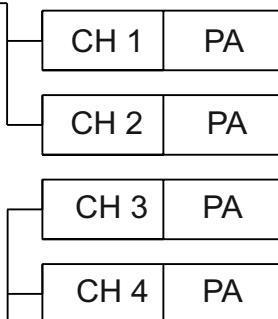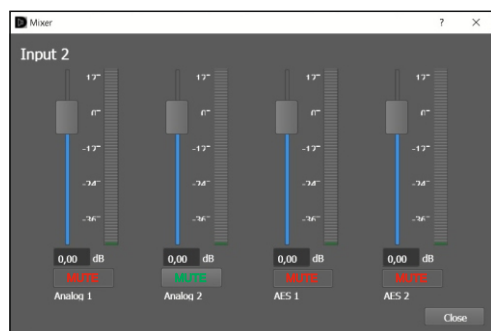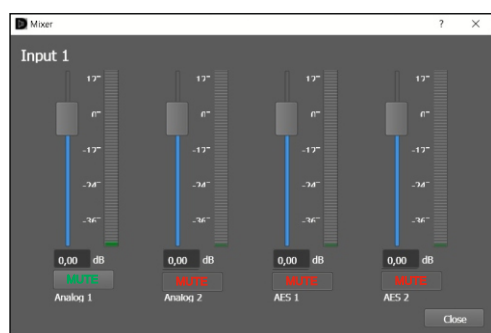

E84+E118S Cardioida

preset E84+118C-4x (6 channel DSP)

  E84+118C-44 (4 channel DSP)

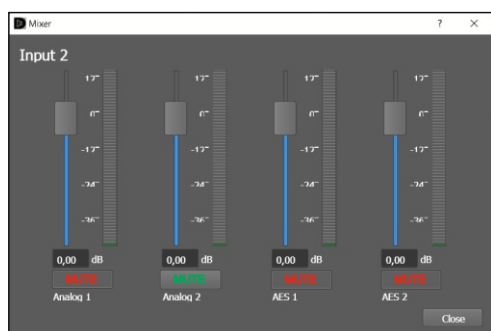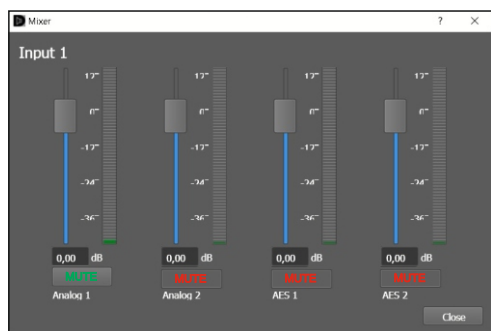

CH 3 LF

CH 4 HF

CH 1 SBC

CH 2 SB

